






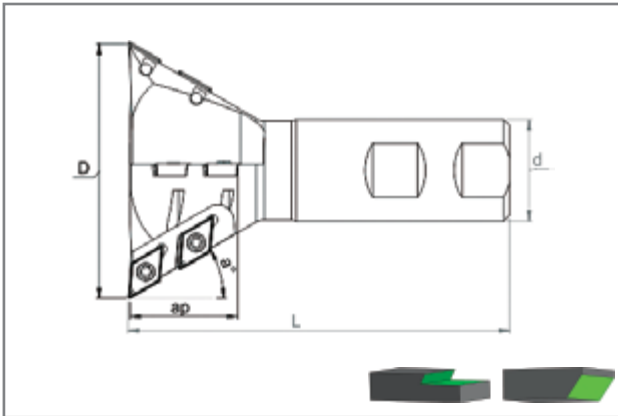
## HELİSEL FREZELER Helical Cutter

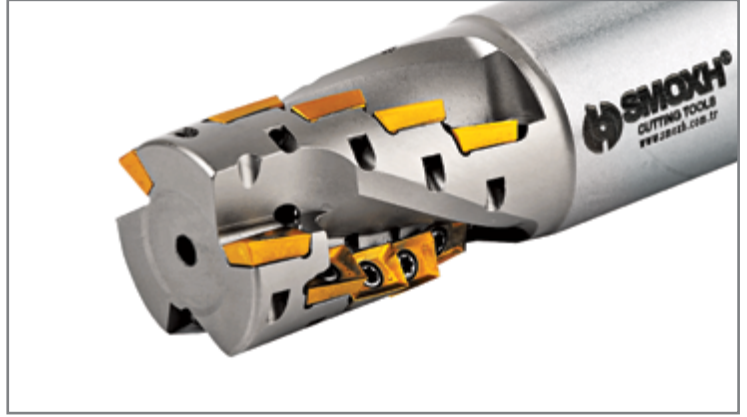

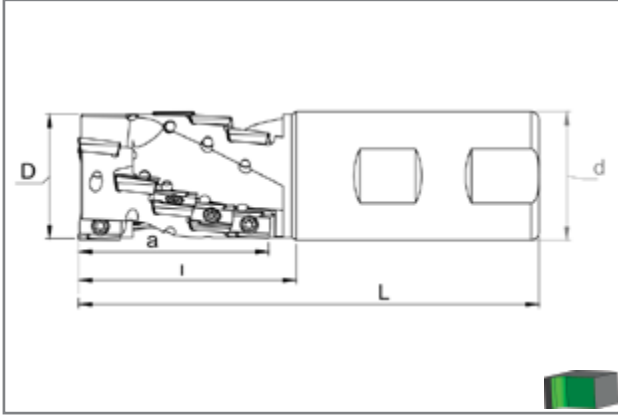


KOD CODE	ÖLÇÜLER DIMENSION (mm)							KESİCİ UÇ INSERT	YEDEK PARÇALAR SPARE PARTS	
	D	Z	Z <sub>1</sub>	d	L	l	a		Sıkma Vidası Clamp Screw	Anahtar Torx Key
<b>HT90 HELİSEL FREZELER HELICAL CUTTER-ISO</b>										
HT90 AP10 D20 L87 A20 Z06-H	20	2	6	20	87	40	28	AP.. 1003.. ISO UCA UYGUNDUR FOR ISO INSERT	SSV M2.5x7 9506	T08
HT90 AP10 D25 L105 A25 Z08-H	25	2	8	25	105	45	38			
HT90 AP10 D32 L115 A32 Z15-H	32	3	15	32	115	55	47			
HT90 AP10 D40 L130 A32 Z18-H	40	3	18	32	130	75	55			

\*Z<sub>1</sub>=Etkili kesici ağzı \*Z<sub>1</sub>= Effective Cutting Teeth

## KIRLANGIÇ FREZELER Dove Mills



KOD CODE	ÖLÇÜLER DIMENSION (mm)							KESİCİ UÇ INSERT	YEDEK PARÇALAR SPARE PARTS	
	D	Z	Z <sub>1</sub>	d	L	a°	ap		Sıkma Vidası Clamp Screw	Anahtar Torx Key
<b>BKRF 55° / 60° KIRLANGIÇ FREZELER DOVE MILLS-ISO</b>										
BKRF60 DC11 D32 W20 L120 Z02	32	2	2	20	120	60	10	DCM.11T304 ISO UCA UYGUNDUR FOR ISO INSERT	SSV M3.5x10 9511	T15
BKRF60 DC11 D40 W25 L120 Z02	40	2	2	25	120	60	10			
BKRF60 DC11 D50 W40 L120 Z04	50	4	4	25	120	60	18			
BKRF55 DC11 D60 W25 L120 Z04	60	4	6	25	120	55	24			
BKRF60 DC11 D80 W32 L120 Z04	80	4	8	32	120	60	34			

\*Z<sub>1</sub>=Etkili kesici ağzı \*Z<sub>1</sub>= Effective Cutting Teeth